


# ME FW update SOP

## ME FW update run in Windows mode:

For provisioned system, please unprovisioning system and start on step 1.

For unprovisioning system, please start on step 4 directly.


1. Unzip INTEL-SA-00075 UnprovisioningTool 1.0.0.0025.zip to C: and then enter the folder.  
Run “**msiexec.exe/i unprovisionToolInstaller.msi /qn**” in Administrator mode.

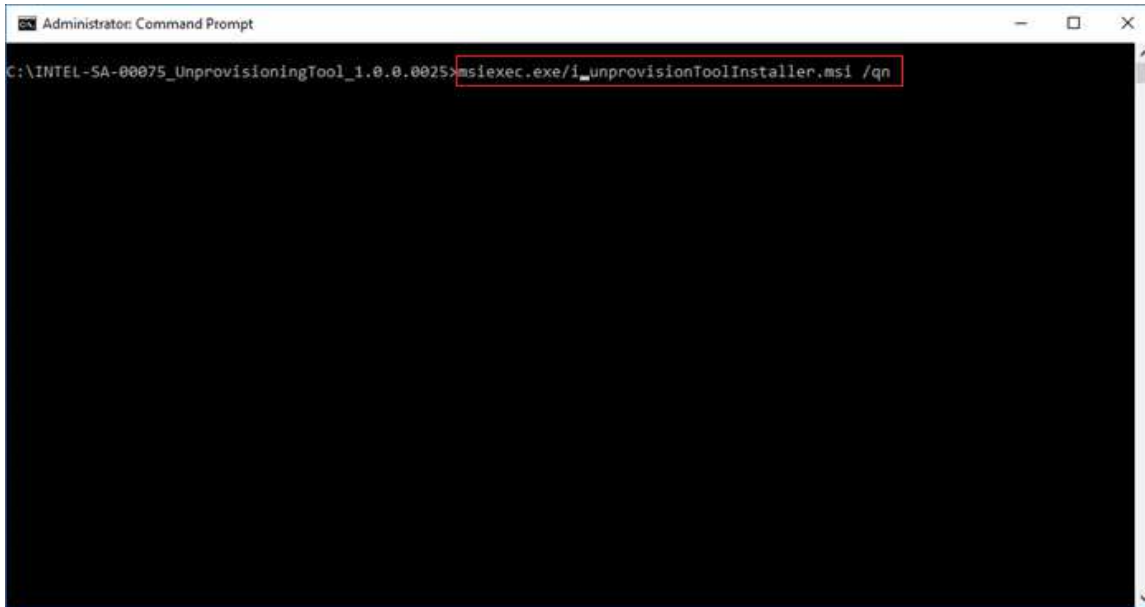

```
Administrator: Command Prompt
C:\INTEL-SA-00075_UnprovisioningTool_1.0.0.0025>msiexec.exe/i_unprovisionToolInstaller.msi /qn
```

2. After unprovision, please reboot system.


3. Run “**msiexec.exe/x unprovisionToolInstaller.msi /qn**” in Administrator mode to uninstall the tool.

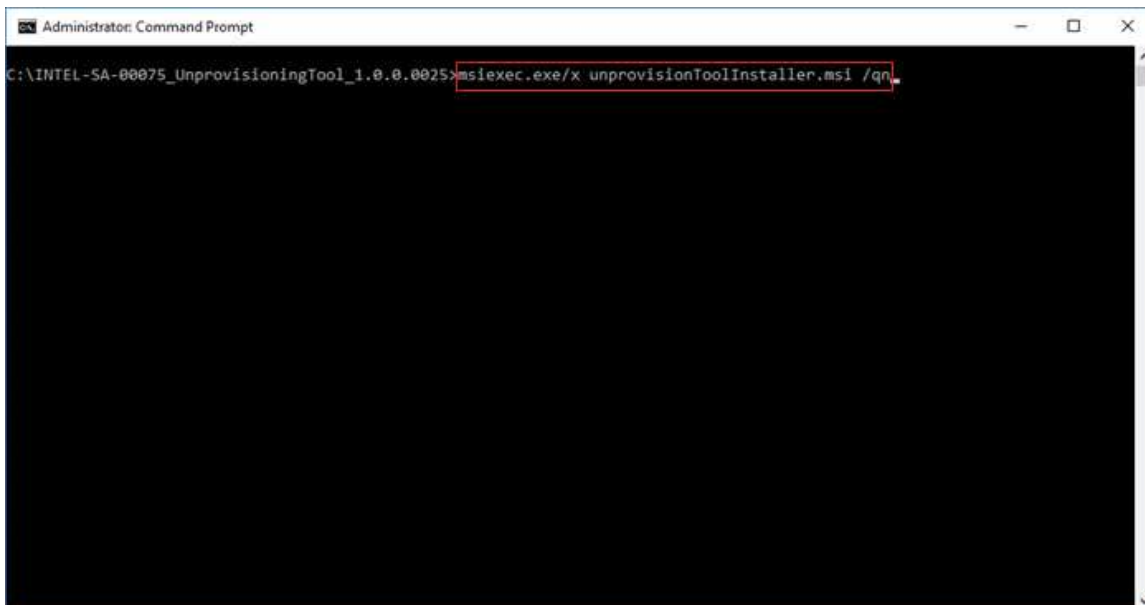


```
Administrator: Command Prompt
C:\INTEL-SA-00075_UnprovisioningTool_1.0.0.0025>msiexec.exe/x unprovisionToolInstaller.msi /qn
```

4. Unzip ME\_XX.X.XX.XXXX.zip and run “**FLASH.bat**” in Administrator mode:

SKL model	ME_11.0.25.3001_20170510.zip
KBL model	ME_11.6.27.3264_20170510.zip
Q87 model	ME_9.1.41.3024_20170518.zip

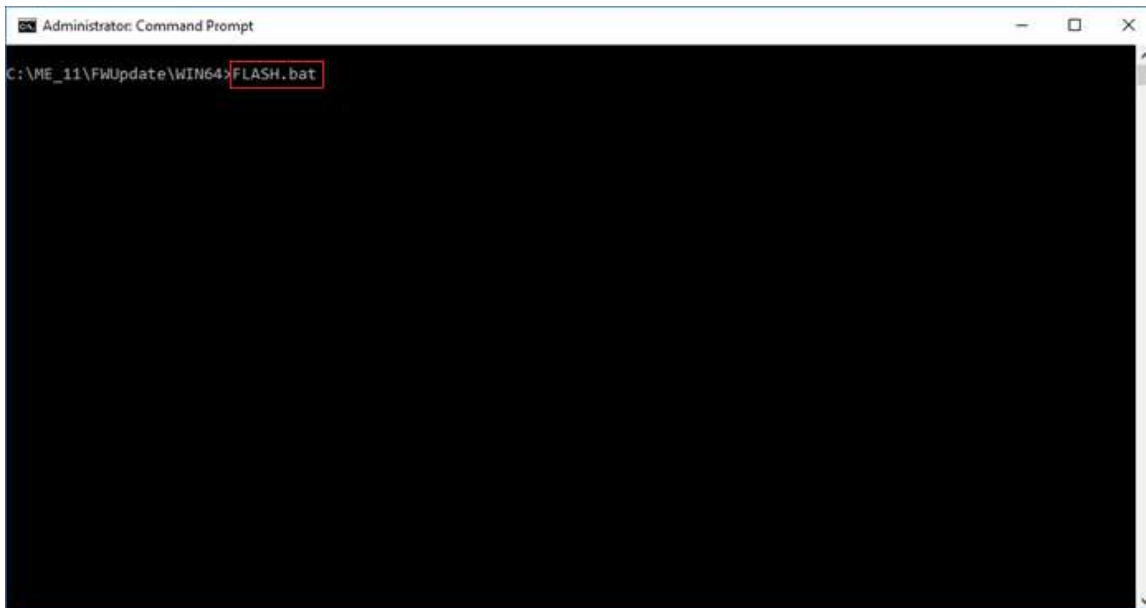

5. Below message will show up if the update is completed.

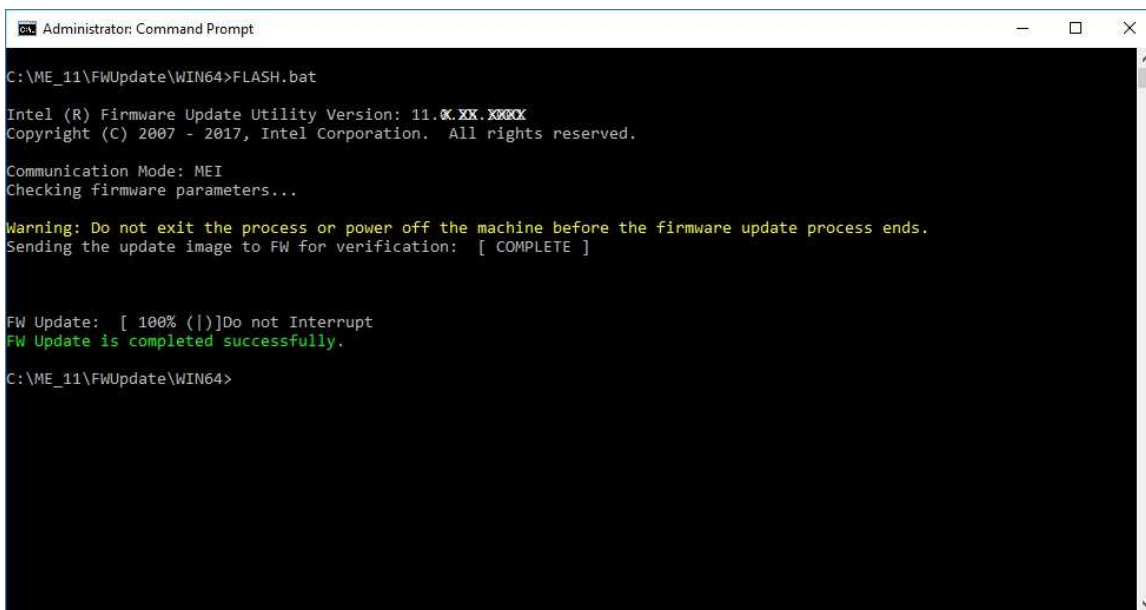

6. Reboot system, once complete the update.