

Update TPM FW SOP

1. Power on system and enter to OS, unzip "TPM FW_4.34.1011.0.zip"
2. Execute "IFXTPMUpdate_TPM12_v0434.exe"

Name	Date modified	Type	Size
IFXTPMUpdate_TPM12_v0434.com	10/5/2017 6:39 PM	MS-DOS Applicati...	7,724 KB
IFXTPMUpdate_TPM12_v0434.exe	10/5/2017 6:39 PM	Application	7,724 KB

3. When the system shows the following information, it means the TPM FW have been updated successfully.

```
/restart          Will automatically restart Windows once the update has
                  finished successfully.

 logfile:<file>   Write a log file to the location specified by <file>.

C:\Users\AU\Desktop\TPM_FUEC_v1.01.0437.00_SLB_965x_v4.32_v4.33_IO_v4.34\FWUpdat
e_SLB965x_x86>IFXTPMUpdate_TPM12_v0434.com /info

*****
*   IFXTPMUpdate_TPM12_v0434.com           01.01.0437.00           *
*****

Trusted Platform Module 1.2 (Infineon Technologies AG, SLB 9655 IT 1.2)
Firmware Version 4.34.1011.0 (63 remaining updates)
New Firmware Version: 4.34.1011.0

Precondition state:
Infoexit: The TPM already runs the firmware included with this program or a new
er one. (0xe02a001b)

C:\Users\AU\Desktop\TPM_FUEC_v1.01.0437.00_SLB_965x_v4.32_v4.33_IO_v4.34\FWUpdat
e_SLB965x_x86>
```

4. Reboot the system